

設置してください。 3. 電源電圧は定格電圧内でご使用ください。 4. 本製品を分解・修理・改造しないでください。 5. 廃棄するときは、産業廃棄物として処理してください。 ■対応規格 · EN61326-1 · Electromagnetic environment : Industrial electromagnetic environment (EN/IEC 61326-1 Table 2) 使用上の注意 本製品の動作不能、誤動作、または性能・機能への悪影響を防ぐため、以下の ことを守ってください。 1. 設置場所について 下記の設置場所では使用しないでください。 ・周囲温度が定格の範囲を超える場所 ・周囲湿度が定格の範囲を超える場所 ・腐食性ガス、可燃性ガスがある場所 ・塵埃、塩分、鉄粉がある場所 ・粉塵がある場所 振動や衝撃が直接加わる場所 ・直射日光があたる場所 ・水・油・化学薬品の飛沫がある場所 ・周囲にノイズの影響を受けやすい機器(精密機器など)がある場所 ・強磁界、強電界、強帯電物がある場所 * 設置・使用時の注意 筐体開口にある金属棒2本はセンサ電極になっています。本製品

安全上の要点

2. 操作・保守の安全を確保するため、高電圧機器や動力機器から離して

本製品を安全に使用するため、以下のことを守ってください。

1. 引火性・爆発性ガスの環境では使用しないでください。

- の周囲に帯電物などがあるとイオンバランスコントロールができな くなります。 本製品の周囲約150mm以内に帯電物を近づけないでください。
- 2. 電源および配線について
- ・DC24V 電源を使用する場合

入出力ケーブルを用いて背面コネクタに接続ください。入出力ケーブ ルより電源供給する場合、同時にACアダプタは接続しないでください。 DC24V 端子を接地しないでください。

- ・エアクリーンユニットより電源を供給する場合
- 形 ZN-J41A に付属の専用のケーブルで接続してください。同時に AC アダプタは接続しないでください。
- ・電源ラインにサージが確認された場合、環境に応じてサージアブソー バを接続ください。
- ・電源ライン / 出力ライン接続時には、極性に注意して接続してください。 また、定格を超える電圧を印加しないでください。
- ・電源ライン接続時は、電源を短絡しないでください。
- ・出力ライン接続時は、定格を超える電流を流さないでください。
- ・接地端子は必ず接地してください。接地せずに使用しますとイオンバ ランスがずれる場合があります
- ・高圧線、動力線と本製品の配線は別配線としてください。 同一配線あるいは同一ダクトにすると誘導を受け、誤動作あるいは 故障の原因となります。
- 3. 保守点検について
- ・放電針の汚れによりイオン量が低下、あるいはイオンバランスがずれ る場合がありますので、放電針は定期的に清掃してください。 ・放電針の清掃や脱着を行う場合は、必ず電源を切って1分以上たって
- から作業をしてください。 ・放電針には、直接手で触れないでください。
- ・放電針の清掃には、エタノール、またはイソプロピルアルコールを使 用してください。シンナー、ベンジン、アセトン、灯油類は使用しな いでください。

■輸出について

輸出の際は、本体の日本語警告ラベルを付属の英文警告ラベルに 貼り替えてください。

■概要・特長

- ・本製品は、コロナ放電により空気をイオン化し、エアクリーンユニッ トでイオンを帯電物に吹き付けることによって、帯電物上の静電気を 除電する装置です。
- ・エアクリーンユニット(形 ZN-A4105 別売)と同時に取り付け、配 線が可能ですのでイオナイザ個別での取り付け、配線が不要です。
- ・バータイプのイオナイザと比較してエアクリーンユニットの層流をほ
- · Auto Ion Control 機能により、イオンバランスを最良の状態に維持しま す。

■各部の名称と機能



- 高圧異常時に赤色に点灯します。
- (3) クリーニング予告 / 警告灯
- 放電針が汚れて、除電能力が低下する前に予告として橙色に点滅します。 さらに汚れて除電能力が維持できなくなると橙色に点灯します。
- (4) 電源表示灯
- 電源 ON 時、緑色に点灯します。
- (5) イオンバランス調整ボタン

ボタンを押すことによりイオンバランスを調整できます。



(6) 電源入力/信号出力コネクタ

- エアクリーンユニットと接続した場合、電源供給、出力管理ができます。 エアクリーンユニットと接続しない場合、DC24V 電源を入力できます。 クリ ーニング予告、クリーニング警告動作(警告時に OFF する)、高圧異常 出力(異常時にOFF する)を出力できます。
- (7) 接地端子
- グランド接続端子です。

(8)AC アダプタ端子 使用しません。



(9) 放電針

放電針に高圧をかけ、コロナ放電させることによりイオンを発生します。 (10) イオンバランスセンサ

放電針から出るイオンのバランスを検知し、自動でイオンバランスをフィードバ ック制御します。

(11) 取付穴

エアクリーンユニット、クリーンブースパネルなどに本製品を取り付ける穴で す。

- - とんど遮ることなく設置できます。

■定格/性能		
項目	仕様	
形式	形ZN-J41A	
適用エアクリーン ユニット	形ZN-A4105	
電源電圧	DC24V±10% リップル(p-p)10%以下	
消費電流	300mA max	
放電電圧	±7kV max	
放電方式	バリアブルDC方式	
除電時間 (代表例)*1	5秒以内	
イオンバランス (代表例)*2	±30V以下	
	電源(緑点灯)	
表示灯	クリーニング予告(橙点滅)	
26/1/1	クリーニング警告(橙点灯)	
	高圧異常(赤点灯)	
外部出力	高圧異常出力/クリーニング出力 :フォトMOSリレーによる出力(DC30V 300mA以下)	
	マニュアルイオンバランス調整	
機能	クリーニング検知	
	高圧異常検知	
周囲温度範囲	動作時/保存時:0~+40℃ (ただし、氷結・結露しないこと)	
周囲湿度範囲	動作時/保存時:35~65%RH	
11 55	(ただし、結露しないこと) 本体:ABS、放電針:タングステン	
材 質 外形寸法		
711/01 広	408 (W) ×470 (D) ×45 (H) mm	
重量	本体:約1.5kg 梱包状態:約2.7kg	
	取扱説明書(本書)	
	吹出口取付用パッキン	
	取付用ねじ	
付属品	エアクリーンユニット 接続ケーブル	
	な祝り ー ノル フェライトコア	
	英文警告ラベル	
1	大人言ロ ノベル	

*1測定距離300mm、エアクリーンユニット形ZN-A4105使用、 風量最大、吹き出し口中央ダウンフロー下にて、出荷時 帯電プレートモニタ (150×150mm、20pF) が±1000V→±100Vまで減 少する時間。温度+18~+28℃、湿度35~55%RH ただし、測定空間中に溶剤などからのアウトガスがあると性能を満足でき ないことがあります。

*2測定距離300mm、エアクリーンユニット形ZN-A4105使用、 風量最大、吹き出し口中央ダウンフロー下にて、出荷時 帯電プレートモニタ(150×150mm、20pF)にて10秒間測定 温度+18~+28℃、湿度35~55%RH ただし、測定空間中に溶剤などからのアウトガスがあると性能を満足でき ないことがあります。

■入出力と配線について

形 ZN-J41 に付属の入出力ケーブルの線色と配線および出力仕様については、 以下をご参照ください。

①線色と配線

CN No.	線色	接続	
1	青	高圧異常出力	
2	黄	クリーニング警告出力	
3	緑	クリーニング予告出力	
4	赤	出力コモン	
5	黒	0V入力	
6	白	24V入力	

端子台に用いる電線に関して、以下の点にご注意ください。 電線の長さ: 30m 以下

②出力仕様



■設置方法

●空気もれ防止に付属のパッキンを貼り付けます。



●エアクリーンユニットと同時に設置する場合

下図のようにエアクリーンユニットとクリーンブースパネルで挟み込む ようにねじ止めしてください。付属ねじ M5×60を4本使用し、締め付け トルク 2.3 ~ 2.8N.m で取り付けてください。適用できるパネル厚みは 20mm 以下です。



●エアクリーンユニットとねじ止めした後、ブースパネルとねじ止めする場合 エアクリーンユニットとねじ締めしてください。付属ねじ M5×40を4本使 用し、締め付けトルク2.3~2.8N.m で取り付けてください。



取り付け穴4箇所にナットを挿入してください。



どちらでも取付け可能です。

付属ねじ M5×40を4本使用し、締め付けトルク2.3~2.8N.m で取り付 けてください。



■電源を接続する方法

本製品を CE 適合品として使用する場合には、エアクリーンユニット接続ケー ブルまたは入出力ケーブルに付属のフェラ小コアを1重に巻きつけてください。

イオナイザ接続側



下記のいずれかの方法で電源を接続してください。 ●エアクリーンユニットと接続する場合 下図のように形 ZN-J41A に付属の専用のケーブルで接続してください。



●入出力ケーブルを使用する場合 電源入力/信号出力コネクタに付属の入出力ケーブルを接続して ください。白:24V、黒:0Vを接続してください。

■機能

- ●マニュアルイオンバランス調整
- 下記の手順でイオンバランスの調整ができます。イオンバランスの調整に は、チャージプレートモニタなどの測定器が必要です。
- ①調整モードに入ります。 イオンバランス調整ボタン(以下ボタン)の+と-両方のボタンを3秒以上 押します。調整モードに入ると表示灯3種(電源表示灯、クリーニング予 告 / 警告灯、高圧異常表示灯) が3回点滅します
- 調整モードに入るとイオンバランス調整値は、工場出荷時の状態に初期 化されます。
- ②イオンバランスを調整します。
- チャージプレートモニタを見ながらボタンを押してください。+ボタンを押すとイ オンバランスが+に変化します。+ボタンを押すごとに高圧異常表示灯が1 回点滅します。ーボタンを押すとイオンバランスが一に変化します。ーボタンを 押すごとに電源表示灯が1回点滅します。調整限界になるとボタンを押し ても表示灯が点滅しなくなります。

③調整ロックモード

調整モードに入って約10秒間ボタンの押下がないと表示灯3種(電源 表示灯、クリーニング予告 / 警告灯、高圧異常表示灯) が3回点滅し 調整ロックモードになります。調整ロックモードでは、ボタンを押してもイオン バランスは変化しません。調整ロックモードでは、ボタンを押すと電源表示 灯と高圧異常表示灯が同時に2回点滅します。

●高圧異常検知機能

- 機能内容
- 高圧回路の異常を検知し警告表示および動作を停止します。 高圧異常検出時の状態

表示	電源ランプ	点灯
	クリーニング予告/警告灯	消灯
	高圧異常表示灯	点灯
出力	クリーニング予告/警告出力	ON
	高圧異常出力	OFF
		• • • • •

·復帰条件

高圧異常モードからの復帰は、電源再投入することによって行われます。 それでも復帰しない場合は、貴社担当オムロン営業員にお知らせくださ 12

●クリーニング表示

- 放電針にホコリや汚れがつき、イオンバランスや除電能力の低下が発生し たときに、クリーニング予告灯が点灯します。
 - 表示①: クリーニング予告表示 (橙点滅)
 - クリーニングをしないと、イオンバランスが保持できない、また は、除電能力が低下する恐れがある場合
 - 表示②: クリーニング警告表示 (橙点灯)
 - 既に、イオンバランスや除電能力が保持できていない状態

電源投入から予告・警告表示灯が点灯するまでに数分程度かかることが あります。

電源表示灯(緑点灯) クリーニング予告灯(橙点滅) /クリーニング警告灯(橙点灯) 高圧異常表示灯(赤点灯) イオンバランス調整ボタン 電源スイッチ ┢

Ð 放電針(4箇所) 360 412

■点検および清掃

清掃は定期的に行ってください。 また、必ず電源を OFF にして 1 分以上たってから行ってください。 ①放電針ホルダの取外し/取付け



- *放電針の先端は触らないようお願いします。また傷つけたり、曲げたりす ると性能が低下します。
- *除電性能を維持するために、放電針は当社指定の放電針をご使用くだ さい。
- *清掃後も性能が復帰しない場合は、放電針の交換を行ってください(必 ず下記の当社指定のものをご使用ください)。
- 別売品 放電針(針ホルダ付):形 ZN9-JH04(4 セット入り) *パーティクルの少ないクリーンブースにおいても、空気中に混在しているガ
- スが、放電針の先端で起こるコロナ放電により粒子化し、放電針に付 着して一定量になると飛散します。飛散したパーティクルが製品にダメー ジを与える工程においては、必ず一定周期の清掃を行ってください。
- *クリーンルームなどのパーテーションやフィルタのシール材に使用されている シリコーンシーラ小剤が、コロナ放電により粒子化し、放電針に付着する ことがあります。従って放電針のクリーニングが必要となります。
- *清掃周期につきましては、使用環境により汚れ方が異なりますので、お 客様にてお決めください。

■外形図

12-ø6取付穴(貫通穴)



[単位:mm]

ご承諾事項

当社商品は、一般工業製品向けの汎用品として設計製造されています。従いまして、次に 掲げる用途での使用を意図しておらず、お客様が当社商品をこれらの用途に使用される際 には、当社は当社商品に対して一切保証をいたしません。ただし、次に掲げる用途であって も当社の意図した特別な商品用途の場合や特別の合意がある場合は除きます。

- (a) 高い安全性が必要とされる用途(例:原子力制御設備、燃焼設備、航空・宇宙設備、鉄 道設備、昇降設備、娯楽設備、医用機器、安全装置、その他生命・身体に危険が及び うる田(余)
- (b) 高い信頼性が必要な用途(例:ガス・水道・電気等の供給システム、24時間連続運転 システム、決済システムほか権利・財産を取扱う用途など)
- (c) 厳しい条件または環境での用途(例:屋外に設置する設備、化学的汚染を被る設備、 電磁的妨害を被る設備、振動・衝撃を受ける設備など)
- (d) カタログ等に記載のない条件や環境での用途

*(a)から(d)に記載されている他、本カタログ等記載の商品は自動車(二輪車含む。以下同 じ)向けではありません。自動車に搭載する用途には利用しないで下さい。自動車搭載用 商品については当社営業担当者にご相談ください。

*上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データシート等最新版 のカタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。



OMRON

Model ZN-J41A

Air Clean Ionizer

INSTRUCTION SHEET

Thank you for selecting OMRON product. This sheet primarily describes precautions required in installing and operating the product.

Before operating the product, read the sheet thoroughly to acquire sufficient knowledge of the product. For your convenience, keep the sheet at your disposal.

TRACEABILITY INFORMATION:

Importer in EU : Omron Europe B.V. Wegalaan 67-69 2132 JD Hoofddorp, The Netherlands Manufacturer: Omron Corporation, Shiokoji Horikawa, Shimogyo-ku, Kyoto 600-8530 JAPAN

The following notice applies only to products that carry the CE mark: Notice:

This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.



© OMRON Corporation 2006-2007 All Rights Reserved.

PRECAUTIONS ON SAFETY

Meanings of Signal Words

torque of 2.3 to 2.8 N.m.

-	
RNING	Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally, there may be
	significant property damage.

Alert Statements in This Instruction Sheet

When screw-fastening the body for use, vibration or the body's own weight may cause it to fall, and cause an injury if the screws are not sufficiently tightened. Mount the body using M5 screws tightened to a tightening



Water droplets entering the body and coming into contact with the electrical circuit may cause the circuit to ignite. Do not use the product in locations subjected to condensation or in highly humid atmospheres.

A CAUTION

When this product is used in a closed space, ozone may accumulate, which is harmful to the body. Ventilate the installation site well during use.



Please observe the following precautions for safe use of the product. 1. Do not use this product in environments where it can be exposed to

- inflammable/explosive gas.
- 2. In order to secure the safety of operation and maintenance, do not install this product close to high-voltage devices and power devices.
- 3. Use the power supply within the specified voltage range.
- 4. Do not disassemble, repair, or modify this product.
- 5. Dispose of this product as industrial waste.
- Applicable standards
- ÊN61326-1
- Electromagnetic environment : Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

PRECAUTIONS FOR CORRECT USE

Please observe the following precautions to prevent failure to operate, malfunctions, or undesirable effects on product performance.

- 1. Installation Site
- Do not install this product in locations subjected to the following conditions:
- Ambient temperature outside the rating
- Ambient humidity outside the rating
- Presence of corrosive or flammable gases
- Presence of dust, salt, or iron particles
- Presence of particles and dust
- Direct vibration or shock
- Direct sunlight
- Water, oil, or chemical fumes or spray
- Devices (e.g. precision equipment) susceptible to the influence of peripheral noise
- · Strong magnetic or electric field, and charged objects
- * Precautions for Installation and Use

The two metal bars on the enclosure opening are sensor electrodes. The ion balance can no longer be controlled if charged objects are located around this product. Do not bring charged objected within about 150 mm of this product.

- 2. Power Supply and Wiring
- When using a 24 VDC power supply:

Connect the 24 VDC power supply to the rear connector using the I/O cable. When supplying power by the I/O cable, do not connect the AC adapter at the same time.

- Do not ground the 24 VDC terminal.
- When supplying power from the Air Clean Unit: Connect the power supply to the ZN-J41A using the exclusive cable (provided). Do not connect the AC adapter at the same time.
- If surge current is present in the power lines, connect surge absorbers that suit the operating environment.
- When connecting the power and output lines, pay attention to the polarity of the lines.
- The supply voltage must be within the rated range.
- When connecting the power line, do not short-circuit the power supply.When connecting the output line, the supply current must be within the rated range.
- Always ground the GND terminal. Using the product without the GND terminal grounded may cause the ion balance to deviate.
- High-voltage lines and power lines must be wired separately from this product. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.
- 3. Maintenance and Inspection
- Periodically clean the discharge needles as dirt on these needles causes the amount of generated ions to fall or the ion balance to deviate.
 - Always wait at least one minute after turning the power supply OFF before cleaning or connecting/disconnecting the discharge needles.
- Do not touch the discharge needles directly with your hands.
 Use athenel or isomorphy algobal to show the discharge needle
- Use ethanol or isopropyl alcohol to clean the discharge needles. Do not use paint thinner, benzene, acetone or kerosene.

Label Replacement

The warning labels written in Japanese are affixed to the body. For countries other than Japan, warning labels must be replaced by English ones (supplied with the product).

Outline and Features

- This product neutralizes static electricity on charged objects by ionizing air by
- corona discharge and spraying ions at charged objects from an Air Clean Unit.
 An Air Clean Unit (ZN-A4105, sold separately) can also be installed and connected to this product at the same time. This eliminates the need for individual installation
- and wiring of the Ionizer.Compared with bar-type ionizers, this product can be installed with minimal
- blocking of laminar airflow from an Air Clean Unit.
- The Auto Ion Control function keeps the ion balance in an optimum state.

Part Names and Functions



(1) Power switch

- Turns the power supply ON/OFF.
- (2) Error output indicator
 - This indicator lights red during an error output.
- (3) Cleaning notice/warning indicator

This indicator flashes orange to notify you that the discharge needles are dirty and the product's neutralizing capabilities are about to drop. This indicator will stop flashing and stay lit when the discharge needles become even dirtier and the product's neutralizing capabilities can no longer be sustained.

- (4) Power indicator
- This indicator lights green when the power is ON.
- (5) Ion balance adjustment button
- Pressing this button adjusts the ion balance.



(6) Power input/signal output connector

- Power can be supplied and output managed via this connector when the Air Clean Unit is connected.
- When the Air Clean Unit is not connected, 24 VDC power can be input. The
- cleaning notice, cleaning warning operation (Unit turned OFF when a warning is output) and error output (Unit turned OFF when an error is output) can be output.(7) GND terminal
- Terminal for connecting the ground
- (8) AC adapter terminal

nonuse

(9) Discharge needles

Ions are generated by applying a high voltage to these discharge needles and discharging corona.

(10) Ion balance sensor

This sensor detects the balance of the ions emitted from the discharge needles, and this information is used as feedback to automatically control the ion balance. (11) Mount holes

Holes for mounting this product on an Air Clean Unit, clean booth panel or other equipment



Ratings/Performance

Ratings/Perform	lance	
Item	Specifications	
Model	ZN-J41A	
Available air clean unit	ZN-A4105	
Power supply voltage	24 VDC±10% ripple (p-p) 10% max.	
Current consumption	300 mA max.	
Output voltage	±7kV max.	
Discharge method	Variable DC	
Neutralizing time (typical) *1	5 sec max.	
lon balance (typical) *2	±30 V max.	
	Power (Green)	
Indicators	Cleaning notice (Orange flashing)	
Indicators	Cleaning alarm (Orange)	
	Error (Red)	
Outputs	Error output, cleaning notice/alarm output: photo MOS relay (30 VDC 300 mA max.)	
Functions	Manual Ion balance adjustment,	
	cleaning alarm, error alarm	
Ambient temperature	Operating and storage: 0 to 40°C	
	(with no icing or condensation)	
Ambient humidity	Operating and storage: 35 to 65% (with no condensation)	
Materials	Case: ABS, Discharge needles: Tungsten	
Dimensions	408 (W) × 470 (D) × 45 (H) mm	
Weight (packed state)	Approx. 1.5 kg (approx. 2.7 kg)	
	Instruction sheet	
	Sealing parts	
Accessories	Mounting screws	
	Connector cable for	
	Air Clean Unit	
	Ferrite core	
	English warning label	

*1 Measurement conditions:

Distance: 300 mm, Air Clean Unit: ZN-A4105 with air level 5, At center of air outlet, Neutralization: From \pm 1000 V down to \pm 100 V with Charge Plate monitor (150 x 150 mm, 20 pF)

Temperature: 18°C to 28°C Humidity: 35% to 55%

The performance might not be able to be satisfied when there is gas such as solvent gas in the measurement area.

*2 Measurement conditions:

Distance: 300 mm, Air Clean Unit: ZN-A4105 with air level 5, At center of air outlet, Measurement time: 10 seconds

Temperature: 18°C to 28°C Humidity: 35% to 55%

The performance might not be able to be satisfied when there is gas such as solvent gas in the measurement area.

■ I/O and Wiring

The following summarizes the colors and wiring of the I/O cable provided with the ZN-J41, and output specifications.

(1) Wire Colors and Wiring

the colors and trining		
CN No.	Wire Color Signal	
1	Blue	Error output
2	Yellow	Cleaning warning output
3	Green	Cleaning notice output
4	Red Common output	
5	Black	0 V input
6	White	24 V input

For wire used for a terminal block, consider the following. Wire length : 30m and less

(2) Output specifications



Installation Method

• Attach the sealing parts (provided) to prevent air from escaping.



Combined installation with Air Clean Unit

Screw-fasten the Air Clean Ionizer so that it is fitted between the Air Clean Unit and clean booth panel as shown in the figure below. Install the Air Clean Ionizer using the four M5x60 screws (provided) at a tightening torque of 2.3 to 2.8 N.m. The maximum panel thickness is 20 mm.



Screw-fastening onto a clean booth panel after installing the Air Clean Unit

Screw-fasten the Air Clean Ionizer to the Air Clean Unit. Install the Air Clean Ionizer using the four M5x40 screws (provided) at a tightening torque of 2.3 to 2.8 N.m.



Insert the nuts into the remaining four mount holes.



Install the Air Clean Ionizer using the four M5x40 screws (provided) at a tightening torque of 2.3 to 2.8 N.m.



Connecting the Power Supply

To use this product as a CE-compatible product, loop the Air Clean Unit connector cable or I/O cable once through the ferrite core (provided) as shown in the figure below Ionizer connection side

50 to 80

Connect the power supply by one of the following methods.

• When connecting to the Air Clean Unit

Connect the power supply to the ZN-J41A using the exclusive cable (provided) as shown in the figure below.



When using the I/O cable

Connect the I/O cable (provided) to the power input/signal output connector. Connect the white wire to 24V and the black wire to 0V.

Functions

Manual ion balance adjustment

The ion balance can be adjusted by the following procedure. The Charge Plate monitor and other measuring equipment are required to adjust the ion balance. (1) Enter the adjustment mode.

Hold down both of the + and - ion balance adjustment buttons (simply called "buttons" from here on) for at least three seconds. The Unit enters the adjustment mode, and the three indicators (power, cleaning notice/cleaning warning, and error output) flash three times.

* When the Unit enters the adjustment mode, the ion balance adjustment values are initialized to their default settings.

(2) Adjust the jon balance.

Press the buttons while viewing the Charge Plate monitor. Pressing the + button changes the ion balance in the plus direction. Each press of the + button makes the error output indicator flash once. Pressing the - button changes the ion balance in the minus direction. Each press of the - button makes the power indicator flash once. When adjustment limits are reached, the indicator no longer flashes even if the buttons are pressed.

(3) Adjustment lock mode

If the buttons are not pressed for about ten seconds of the Unit entering the adjustment mode, the three indicators (power, cleaning notice/cleaning warning, and error output) flash three times, and the Unit enters the adjustment lock mode. In this mode, pressing the buttons will not change the ion balance, and the power and error output indicators will flash twice simultaneously when the buttons are pressed.

Error Detection Function

• Details

This function indicates a warning and stops Unit operation when an error is detected on the high voltage circuit.

Unit states when an error is detected

		Power indicator	Lit
Indication	Cleaning notice/warning indicator	Out	
	Error output indicator	Lit	
Output	Cleaning notice/warning output	ON	
	Error output	OFF	

Reset conditions

To reset the Unit from the error mode, turn the power supply OFF then back ON again

If this does not remedy the problem, contact your OMRON representative.

Cleaning indications

When dirt or dust adheres to the discharge needles, causing a change in the ion balance or a drop in the Unit's neutralizing capabilities, the cleaning notice indicator lights

Indication (1): Cleaning notice indicator (orange flashing)

The ion balance cannot be sustained or there is a risk that the Unit's neutralizing capabilities are about to drop if the discharge needles are not cleaned

Indication (2): Cleaning warning indicator (orange)

The ion balance or the Unit's neutralizing capabilities can no longer be sustained

It sometimes takes about several minutes for the cleaning notice/cleaning warning indicator to light after the power supply is turned ON.

Dimensions



Inspection and Cleaning

Periodically clean the Unit.

Also, always wait at least one minute after turning the power supply OFF. (1) Removing/installing discharge needle holders



· To install a discharge needle holder, insert it as far as possible, and turn clockwise.

- (2) Cleaning discharge needles · Moisten a cotton wool bud, for example, with ethanol or isopropyl alcohol, and wipe off dirt from the tip of the discharge needle
- * Using unnecessary force to pull out the discharge needle holder will damage it. Always turn the discharge needle holder anticlockwise as far as possible before pulling it out.
- * Take care not to touch the tips of the discharge needles. Also, scratching or bending the tip will cause neutralizing performance to drop.
- * To sustain the Unit's neutralizing performance, use only discharge needles specified by OMRON.
- * If cleaning does not restore the Unit's neutralizing performance, replace the discharge needles. (Always use only discharge needles specified by OMRON.) Sold separately, discharge needle (with needle holder): ZN9-JH04 (pack of 4)
- * Even in minimal particle clean booths, gas in the air is turned into particles by corona discharge at the tips of the discharge needles. These particles stick to the discharge needles and fly off the needle when a fixed amount of particles accumulate. So, always clean the discharge needles periodically in processes where particles flying off the discharge needles will damage products.
- * Corona discharge sometimes causes silicon sealant used in sealing materials in partitions and filters in clean rooms, for example, to turn into particles which stick to the discharge needles. So, the discharge needles must be cleaned in such cases.
- * The customer must determine the cleaning cycle since the operating environment affects how quickly the discharge needles become dirty.

· To remove a discharge needle holder, turn it anticlockwise and pull it out.



Notice for Korea Radio Law

Please see the following URL for Korean KC mark compliance information. http://www.rra.go.kr/selform/OMR-ZN-J

Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

	IRON Corporation Industrial Automation Company (yoto, JAPAN Contact: www.ia.omron.com
F	Regional Headquarters
	OMRON EUROPE B.V. Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388
	OMRON ELECTRONICS LLC 2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787
	OMRON ASIA PACIFIC PTE. LTD. 438B Alexandra Road, #08-01/02 Alexandra Technopark,Singapore 119968 Tel: (65) 6835-3011 / Fax: (65) 6835-3011
	OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-6023-0333 / Fax: (86) 21-5037-2388
)(